

This list is based on the latest firmware of each iPod and iPhone. If you update your iPod touch or iPhone, please restart it.
 This list is applicable to iPod and iPhone models which have a Dock Connector. Not applicable to iPod shuffles.
 If normal connection between iPod/iPhone and the dock connector is disturbed by a dumper or other iPod/iPhone casing, please remove it to avoid poor contact.
 To identify iPod models, please check Apple Inc. website.
 Regarding compatibility of JVC models older than the models in this page, please click here.

		iPod nano 1st generation	iPod nano 2nd generation	iPod classic 80GB, 160GB (2007)	iPod nano 3rd generation	iPod touch 1st generation	iPhone	iPod nano 4th generation	iPod touch 2nd generation	iPhone 3G	iPhone 3GS	iPod nano 5th generation	iPod touch 3rd generation	iPad, iPad 3G (iPad Wi-Fi), iPad (Wi-Fi + 3G)	iPhone 4	iPod nano 6G	iPod touch 4G	
KS-PD100 *7	Audio Play	✓	✓	✓ ¹	✓	-	-	✓	-	-	-	✓	-	-	-	✓ ⁴	-	KS-PD100 *7
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-PDR80 KD-APD89 KD-PDR81 KD-Q844 KD-Q845 KD-Q847 KD-ST22 KD-ABT22	Audio Play	✓	✓	✓	✓	✓	-	✓	✓ ⁶	-	-	✓	✓ ⁶	-	-	✓	✓ ⁶	KD-PDR80 KD-APD89 KD-PDR81 KD-Q844 KD-Q845 KD-Q847 KD-ST22 KD-ABT22
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-DV7400 *5 KD-ADV7400 *5 KD-DV7401/2 *5 KD-DV7404 *5 KD-DV7405/6 *5 KD-DV7407/8 *5	Audio Play	✓	✓	✓	✓	✓	-	✓	✓	-	-	✓	✓	-	-	✓	✓ ¹⁴	KD-DV7400 *5 KD-ADV7400 *5 KD-DV7401/2 *5 KD-DV7404 *5 KD-DV7405/6 *5 KD-DV7407/8 *5
	Video Play	-	✓ ²	-	✓ ²	✓ ²	✓ ²	-	✓ ²	✓ ²	-	-	✓ ²	✓ ²	-	-	✓ ²	Video Play
KD-AVX22 *5 KD-AV444 *5 KD-ADV449 *5 KW-AVX810 *5 KW-AVX814 *5 KW-AVX815 *5 KW-AVX816 *5 KW-AVX818 *5 KW-AVX820 *5 KD-R600 KD-R601 KD-R604 KD-R605 KD-A605 KD-R606	Audio Play	✓	✓	✓	✓	✓	-	✓	✓	-	-	✓	✓	-	-	✓	✓ ¹⁴	KD-AVX22 *5 KD-AV444 *5 KD-ADV449 *5 KW-AVX810 *5 KW-AVX814 *5 KW-AVX815 *5 KW-AVX816 *5 KW-AVX818 *5 KW-AVX820 *5 KD-R600 KD-R601 KD-R604 KD-R605 KD-A605 KD-R606
	Video Play	-	✓ ³	-	✓ ³	✓ ³	✓ ³	-	✓ ³	✓ ³	-	-	✓ ³	✓ ³	-	-	✓ ³	Video Play
KD-R701 KD-R705 KD-R707 KD-R800 KD-R801 KD-R805 KD-R805 KD-R807 KD-R900 KD-R901 KD-R905 KD-R907	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓ ⁶	✓ ⁶	✓ ⁶	✓	✓ ⁶	-	-	✓	✓ ⁶	KD-R701 KD-R705 KD-R707 KD-R800 KD-R801 KD-R805 KD-R805 KD-R807 KD-R900 KD-R901 KD-R905 KD-R907
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-HDR50 KD-AHD59	Audio Play	✓	✓	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	✓ ¹²	-	-	✓ ¹²	✓ ¹²	KD-HDR50 KD-AHD59
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-DV5504 KD-DV5505 KD-DV5506 KD-DV5507 KD-DV5588 KD-ADV5580	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹⁴	✓ ¹⁴	✓	✓ ¹⁴	-	-	✓ ¹⁴	✓ ¹⁴	KD-DV5504 KD-DV5505 KD-DV5506 KD-DV5507 KD-DV5588 KD-ADV5580
	Video Play	-	✓ ²	-	✓ ²	✓ ²	✓ ²	✓ ²	✓ ²	✓ ²	✓ ²	✓ ²	✓ ²	-	-	-	✓ ²	Video Play
KD-AVX20 KD-AVX40 KD-AVX35 KW-AVX720T KD-AVX77 KW-AVX720 KW-AVX724 KW-AVX725 KW-AVX726 KW-AVX728 KW-ADV792 KW-AVX820 KW-AVX824 KW-AVX825 KW-AVX826 KW-NT1	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓ ¹⁴	✓ ¹⁴	✓ ¹⁴	✓	✓ ¹⁴	-	-	✓ ¹⁴	✓ ¹⁴	KD-AVX20 KD-AVX40 KD-AVX35 KW-AVX720T KD-AVX77 KW-AVX720 KW-AVX724 KW-AVX725 KW-AVX726 KW-AVX728 KW-ADV792 KW-AVX820 KW-AVX824 KW-AVX825 KW-AVX826 KW-NT1
	Video Play	-	✓ ³	-	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	-	-	-	✓ ³	Video Play
KD-R610 KD-A615 KD-R618 KD-R616 KD-R611 KW-XR810 KW-XR816 KW-XR811 KW-XR814 KD-R710 KD-R716 KD-R711 KD-R717 KD-R810 KD-A815 KD-R816 KD-R811 KW-XR810 KW-XR816 KW-XR811 KW-XR817 KD-HDR60 KD-AHD69	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹⁴	✓ ¹⁴	✓	✓ ¹⁴	-	-	✓	✓ ¹⁴	KD-R610 KD-A615 KD-R618 KD-R616 KD-R611 KW-XR810 KW-XR816 KW-XR811 KW-XR814 KD-R710 KD-R716 KD-R711 KD-R717 KD-R810 KD-A815 KD-R816 KD-R811 KW-XR810 KW-XR816 KW-XR811 KW-XR817 KD-HDR60 KD-AHD69
	Video Play	-	✓ ⁸	-	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	-	-	-	✓ ⁸	Video Play
KW-AVX730 KW-ADV793 KW-AVX735 KW-AVX736 KW-AVX830 KW-AVX835 KW-AVX836 KW-AVX838	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹⁴	✓ ¹⁴	✓	✓ ¹⁴	-	-	✓ ¹⁴	✓ ¹⁴	KW-AVX730 KW-ADV793 KW-AVX735 KW-AVX736 KW-AVX830 KW-AVX835 KW-AVX836 KW-AVX838
	Video Play	-	✓ ³	-	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	-	-	-	✓ ³	Video Play
KW-NT3HDT KW-NT3HD KW-NT3	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	KW-NT3HDT KW-NT3HD KW-NT3
	Video Play	-	✓ ⁸	-	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	-	-	-	✓ ⁸	Video Play
KD-A525 KD-R520 KD-R521 KD-R525 KD-R526 KD-R524 KD-A525 KD-R620 KD-R628 KD-R629 KD-R626 KD-R621 KD-R528	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	KD-A525 KD-R520 KD-R521 KD-R525 KD-R526 KD-R524 KD-A525 KD-R620 KD-R628 KD-R629 KD-R626 KD-R621 KD-R528
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-HDR70 KD-AHD79 KW-HDR720	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	KD-HDR70 KD-AHD79 KW-HDR720
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-DB52 KD-DB58	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	KD-DB52 KD-DB58
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play
KD-A725 KD-R720 KD-R728T KD-R726 KD-R728BT KD-R721BT KD-R728BT KD-R820BT KD-R828BT KD-R821BT KD-A825BT KD-R928BT KD-R921BT KW-AVX640 KW-AVX646 KW-AV642T KW-AVX740 KW-AVX746 KW-AVX748 KW-ADV794 KW-AVX840 KW-AVX846 KW-AVX848	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁶	✓ ⁶	✓	✓ ⁶	-	-	✓ ⁶	✓ ⁶	KD-A725 KD-R720 KD-R728T KD-R726 KD-R728BT KD-R721BT KD-R728BT KD-R820BT KD-R828BT KD-R821BT KD-A825BT KD-R928BT KD-R921BT KW-AVX640 KW-AVX646 KW-AV642T KW-AVX740 KW-AVX746 KW-AVX748 KW-ADV794 KW-AVX840 KW-AVX846 KW-AVX848
	Video Play	-	✓ ³	-	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	-	-	-	✓ ³	Video Play
KW-NT3HDT KW-NT3HD KW-NT3	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	KW-NT3HDT KW-NT3HD KW-NT3
	Video Play	-	✓ ⁸	-	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	✓ ⁸	-	-	-	✓ ⁸	Video Play

To identify iPod models, please check Apple Inc. website.

- ✓: Available
- : Not covered under warranty

*1: KS-PD100 has the possibility of hanging up while using iPod nano 2nd generation.

*2: To achieve this function, special cable (KS-U19 or KS-U29) is necessary.

*3: To achieve this function, special cable (KS-U20 or KS-U30) is necessary.

*4: Operation from Head Unit will not be possible when iPod is connected to Head Unit under conditions where Music functions do not work (Just after power on or reset).

*5: Setting of iPod's Shuffle mode goes Off just after connecting with these models.

*6: Sound may be absent in some cases.

*7: This model is not equipped with function to charge new iPod. If you wish to charge new iPod using this model, please check Apple Inc. website, > Apple Store > Shop iPod > iPod Accessories > Power > Charging Adapter for iPhone 3G. <http://store.apple.com/us/product/TS696UA?node=MTY1NDM4NDM1Mmco-MjMwMTg2NzQ>
 KS-PD100 can not charge nano 4G, classic 160GB, touch 2G, nano 5G, touch 3G, nano 6G and touch 4G.

*8: To achieve this function, special cable KS-U29 is necessary.

*9: To achieve this function, special cable KS-U30 is necessary.

*10: To achieve this function, special cable KS-U30 is necessary.

*11: iPod Mode does not work on iPod 5G and iPod nano 1G via USB Audio.

*12: When Head mode is switched to iPod mode, iPod goes into the pause mode and does not play back until pushing the play button of iPod itself.

*13: To operate iPod smoothly, please set "iPod Airwork" to "off" on AV Menu - Setup - Disc Setup 1.

*14: FWD or REW search does not work from Head Unit sometimes.

*15: Video image may not be displayed on screen when in iPod mode.

*16: External/Head/iPod mode is switched while video is playing. iPod stops and play key of the head unit on head mode becomes invalid. To play back iPod, on External/iPod mode, please operate iPod itself. On Head mode, please select the music/video in the list of the head unit.

*17: If iPod touch 2G or iPhone 3G is updated to iOS 4.2.1, KD-R610 series might not be able to connect to iPod. In such case, please take the CD receiver to our support center.

Note: Not compatible with iPod 1st + 2nd generation and iPod shuffle 1st + 2nd + 3rd generation because they have no dock connector. iPod mini and iPod 4G are not supported.
 iPod mini and iPod 4G are not supported.