

This list is based on the latest firmware of each iPod and iPhone.
 If you update your iPod touch or iPhone, please restart it.
 This list is applied to iPod and iPhone which have Dock Connector. Not applied to iPod shuffle.
 If the normal connection between iPod / iPhone and a dock connector is disturbed by a dumper or other cases of iPod/iPhone, please remove it to avoid poor contact.

		iPod nano 1st generation	iPod 5th generation (video)	iPod nano 2nd generation (aluminum)	iPod classic (2007)	iPod nano 3rd generation (video)	iPod touch 1st generation	iPhone	iPod nano 4th generation (video)	iPod classic (2008) 120GB	iPod classic (2009) 160GB	iPod touch 2nd generation*20	iPhone 3G	iPhone 3GS	iPod nano 5th generation (video camera)	iPod touch 3rd generation*20	iPad, iPad 3G (iPad(Wi-Fi), iPad(Wi-Fi + 3G))	iPhone 4	iPod nano 6G	iPod touch 4G			
KS-PD100*8	Audio Play	✓	✓	✓*1	✓	✓	-	-	✓	✓	✓	-	-	-	✓	✓*4	-	-	✓*4	✓*4	Audio Play	KS-PD100*8	
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play	
KD-PDR80 KD-APR89 KD-PDR89 KD-PDR81 KD-G844 KD-G845 KD-G847	Audio Play	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓*7	-	-	✓*21	✓*7	-	-	✓	✓*7	Audio Play	KD-PDR80 KD-APR89 KD-PDR89 KD-PDR81 KD-G844 KD-G845 KD-G847	
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play	
KD-DV7400*6 KD-ADV7490*6 KD-DV7401/2*6 KD-DV7404*6 KD-DV7405/6*6 KD-DV7407/8*6	Audio Play	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓*7	-	-	✓*21	✓*7	-	-	✓	✓*7	Audio Play	KD-DV7400*6 KD-ADV7490*6 KD-DV7401/2*6 KD-DV7404*6 KD-DV7405/6*6 KD-DV7407/8*6	
	Video Play	-	✓*2/5	-	✓*2/5	✓*2/5	✓*2/5	-	✓*2/5	✓*2/5	✓*2/5	✓*2/5/7	-	-	✓*2/5	✓*2/5/7	-	-	-	-	✓*2/5/7/18	Video Play	
KD-AVX22*6 KD-AVX44*6 KD-ADV449*6 KW-AVX810*6 KW-AVX814*6 KW-AVX815*6 KW-AVX816*6	Audio Play	✓	✓	✓	✓	✓	✓*7	-	✓	✓	✓	✓*7	-	-	✓*21	✓*7	-	-	✓	✓*7	Audio Play	KD-AVX22*6 KD-AVX44*6 KD-ADV449*6 KW-AVX810*6 KW-AVX814*6 KW-AVX815*6 KW-AVX816*6	
	Video Play	-	✓*3/5/15/17	-	✓*3/5/15/17	✓*3/5/15/17	✓*3/5/7/15/17	-	✓*3/5/15/17	✓*3/5/15/17	✓*3/5/15/17	✓*3/5/7/15/17	-	-	✓*3/5/15/17	✓*3/5/7/15/17	-	-	-	-	✓*3/5/7/17/18	Video Play	
KD-R600 KD-R601 KD-R604 KD-R605 KD-R605 KD-R605 KD-R606 KD-R606 KD-R701 KD-R705 KD-R707 KD-R900 KD-R907	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓*4/7	✓*4/7	✓*7	✓*21	✓*7	-	-	✓	✓*7	Audio Play	KD-R600 KD-R601 KD-R604 KD-R605 KD-R605 KD-R605 KD-R606 KD-R606 KD-R701 KD-R705 KD-R707 KD-R900 KD-R907	
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play	
KD-HDR50 KD-AHD59	Audio Play	✓	✓	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	✓*14	-	-	✓*14	✓*14	Audio Play	KD-HDR50 KD-AHD59	
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play	
KD-DV5504 KD-DV5505 KD-DV5506 KD-DV5507 KD-DV5588 KD-ADV5580	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓*18	✓*18	✓*18	✓*21	✓*18	-	-	✓*18	✓*18	Audio Play	KD-DV5504 KD-DV5505 KD-DV5506 KD-DV5507 KD-DV5588 KD-ADV5580	
	Video Play	-	✓*2/5	-	✓*2/5	✓*2/5	✓*2/5	✓*2/9	✓*2/5	✓*2/5	✓*2/5	✓*2/5/7/18	✓*2/7/9/18	✓*2/7/9/18	✓*2/5	✓*2/5/7/18	-	-	-	-	✓*2/5/7/18	Video Play	
KD-AVX20 KD-AVX40 KD-AVX55 KW-AVX720T KD-AVX77 KW-AVX720 KW-AVX724 KW-AVX725 KW-AVX726 KW-NT1	Audio Play	✓*13/16	✓*13/16	✓	✓	✓	✓	✓	✓	✓	✓	✓*7/18	✓*7/18	✓*7/18	✓*21	✓*7/18	-	-	✓*18	✓*7/18	Audio Play	KD-AVX20 KD-AVX40 KD-AVX55 KW-AVX720T KD-AVX77 KW-AVX720 KW-AVX724 KW-AVX725 KW-AVX726 KW-NT1	
	Video Play	-	✓*13/5/17	-	✓*3/5/17	✓*3/5/17	✓*3/5/17	✓*5/10/17	✓*3/5/17	✓*3/5/17	✓*3/5/17	✓*3/5/7/17/18	✓*5/7/10/17/18	✓*5/7/10/17/18	✓*5/7/9	✓*3/5/7/17/18	-	-	-	-	✓*3/5/7/17/18	Video Play	
KD-R610 KD-R615 KD-R618 KD-R616 KD-R611 KW-XR810 KW-XR816 KW-XR811 KW-XR814 KD-R710 KD-R716 KD-R711 KD-R717 KD-R810 KD-A815 KD-R816 KD-R811 KW-XR810 KD-HDR60 KD-AHD69	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓*4	✓*4/7	✓*4/7	✓*21	✓*4	-	-	✓	✓	Audio Play	KD-R610 KD-R615 KD-R618 KD-R616 KD-R611 KW-XR810 KW-XR816 KW-XR811 KW-XR814	
	Video Play	-	✓*5/9/12	-	✓*5/9/12	✓*5/9/12	✓*5/9/12/19	✓*5/9/12/19	✓*5/9/12	✓*5/9/12	✓*5/9/12	✓*5/9/12	✓*4/5/9/12/19	✓*4/5/7/9/12/19	✓*4/5/7/9/12/19	✓*5/7/9	✓*4/5/9/12/19	-	-	-	-	✓*5/9/12/19	Video Play
KD-R610 KD-R615 KD-R618 KD-R616 KD-R611 KW-XR810 KW-XR816 KW-XR811 KW-XR814 KD-R710 KD-R716 KD-R711 KD-R717 KD-R810 KD-A815 KD-R816 KD-R811 KW-XR810 KD-HDR60 KD-AHD69	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓*4/7	✓*4/7	✓*7	✓*21	✓*4/7	-	-	✓	✓*4/7	Audio Play	KD-R610 KD-R615 KD-R618 KD-R616 KD-R611 KW-XR810 KW-XR816 KW-XR811 KW-XR814	
	Video Play	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Video Play	
KW-AVX730 KW-ADV733 KW-AVX736 KW-AVX830 KW-AVX835 KW-AVX836 KW-AVX838	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓*7/18	✓*7/18	✓*7/18	✓*21	✓*7/18	-	-	✓*18	✓*7/18	Audio Play	KW-AVX730 KW-ADV733 KW-AVX736 KW-AVX830 KW-AVX835 KW-AVX836 KW-AVX838	
	Video Play	-	✓*3/5/11	-	✓*3/5/11	✓*3/5/11	✓*3/5/11	✓*5/10/11	✓*3/5/11	✓*3/5/11	✓*3/5/11	✓*3/5/7/11/18	✓*5/7/10/11/18	✓*5/7/10/11/18	✓*3/5/11	✓*3/5/7/11/18	-	-	-	-	✓*5/7/10/11/18	Video Play	
KW-NT3HDT KW-NT3HD KW-NT3	Audio Play	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓*7	✓*7	✓*7	✓*21	✓*7	-	-	✓	✓	Audio Play	KW-NT3HDT KW-NT3HD KW-NT3	
	Video Play	-	✓*5/9/22	-	✓*5/9/22	✓*5/9/22	✓*5/9/22	✓*5/9/22	✓*5/9/22	✓*5/9/22	✓*5/9/22	✓*5/7/9/22	✓*5/7/9/22	✓*5/7/9/22	✓*5/9/22	✓*5/7/9/22	-	-	-	-	✓*5/9/22	Video Play	

To identify iPod models, please check Apple Inc. web site.

- ✓ Available
- Not covered under warranty

- *1:KS-PD100 has the possibility of hanging up while using iPod nano 2nd generation.
- *2:To realizethis function, special cable(KS-U19 or KS-U29) is necessary.
- *3:To realizethis function, special cable(KS-U20 or KS-U30) is necessary.
- *4:Operation from Head Unit will not be possible when iPod is connected to Head Unit in the condition that a Music function does not work(Just after power on or reset).
- *5:At Video Browsing mode, "Movies", "TV Shows", "Video Podcasts", "Music Videos", "Video Playlists" is supported. "Rented Movies" is not supported.
- *6:Setting of Shuffle mode of iPod becomes Off just after connected with these models
- *7 :Sound would sometimes lack in some cases.
- *8 :This model does not have the function to charge new iPod. If you want to charge new iPod by this model, please check Apple Inc. web site > Apple Store > Shop iPod > iPod Accessories > Power > Charging Adapter for iPhone 3G. <http://store.apple.com/usa/product/TS696LUA?mode=MTYINDAANA&mcop=MlwMTa2NQ>
- KS-PD100 can not charge nano 4G, classic 160GB, touch 2G, nano 5G, touch 3G, nano 6G and touch 4G.
- *9:To realizethis function, special cable KS-U29 is necessary.
- *10:To realizethis function, special cable KS-U30 is necessary.
- *11 :To display the video in iPod, please set "AV Input" to "iPod Video" on AV menu -Setup- Input.
- *12 :If HeadIPod mode is switched during video is playing, iPod stops and play key of the head unit on head mode becomes invalid. To play back iPod, on iPod mode, please operate iPod itself. On Head mode, please select the music/video in the list of the head unit.
- *13:HeadIPod Mode does not work on iPod 5G and iPod nano 1G via USB Audio.
- *14: When HeadIPod mode is switched to iPod mode, iPod turns into the pause mode and does not play back until pushing the play button of iPod itself.
- *15: To operate iPod smoothly, please set "iPod Artwork" to "off" on AV Menu - Setup - Disc Setup 1.
- *16: To listen to the sound in "iPod Mode", please set "AV Input" to "iPod(Off)" on AV Menu - Setup - Input.
- *17: To display the vide in iPod, please set "AV Input" to "iPod(Off)" on AV Menu - Setup - Input.
- *18:FWD or REW search does not work from Head Unit sometimes.
- *19:Video image may not be displayed on screen when iPod mode.
- *20:There is no audio output when connected to OS3.0 iPod/iPhone.
- *21:If you hear same noise, please set "Voice Over" function to "OFF" on iPod and iTunes.
- *22 :If ExternalHeadIPod mode is switched during video is playing, iPod stops and play key of the head unit on head mode becomes invalid. To play back iPod, on ExternalIPod mode, please operate iPod itself. On Head mode, please select the music/video in the list of the head unit.

Note: *Not compatible with iPod 1st + 2nd generation and iPod shuffle 1st + 2nd + 3rd generation because they have no dock connector.
 iPod mini and iPod 4G are not supported.